


#CM2844 Snap-Lock Frame

ASSEMBLY INSTRUCTIONS

#CM2844 Snap-Lock Frame

1. Insert bolts through crossbrace, leg and leg plate.
2. Tighten all four bolts securely.

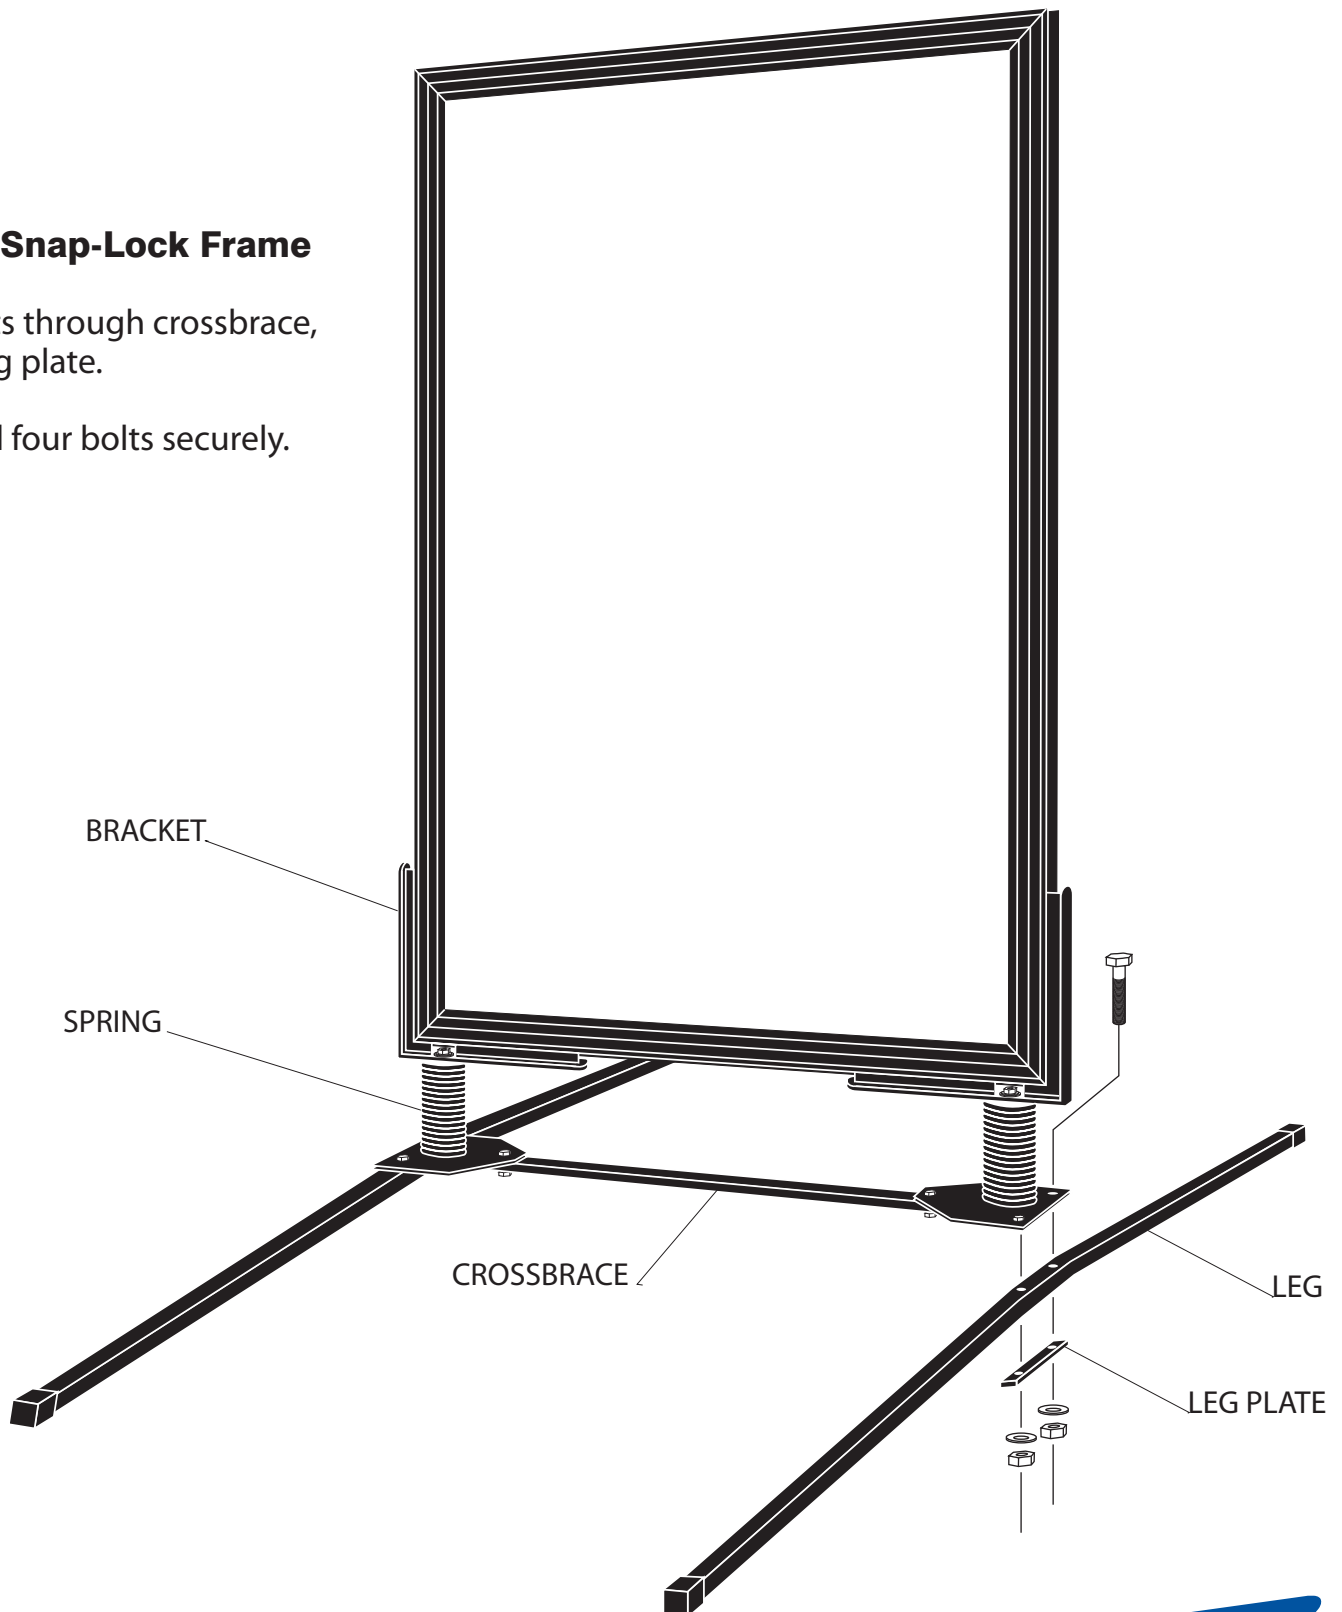

Quality Signs since 1946
1-800-800-4629
1200 Forum Way South
Fort Worth, TX 76140
www.mayadvertising.com